



Southern PATIO ENCLOSURES

ROPE & PULLEY OR HAND ROLLED PATIO ENCLOSURE INSTALLATION

IMPORTANT INFORMATION

Please read these instructions entirely PRIOR to initiating your patio enclosure installation.




Keep in mind, that each patio enclosure is customized to fit your patio. Refer to your design consultation for specific details regarding your installation.

These written instructions are a supplement to our Patio Enclosures Installation Video. The video segments are referenced at the top of each of the following steps. You should have received a link to this video via e-mail. If not, please contact 512-782-8787 to receive the link.

PACKAGE CONTENTS PER EACH CURTAIN

(SEE VIDEO 0:24)

- Hardware Bag
 - D Rings (may be attached to curtains)
 - Screws provided
 - Rope and Pulley Systems Only
 - 2 Double Pulleys
 - 1 Single Pulley
 - 1 Rope
 - Cleat
 - Hand Roll Systems Only
 - Velcro Straps
- Curtain Package
 - Curtains (Labeled with curtain number)
 - Weather Flaps
(Zipped to respective curtain)
- Track Package
 - Top Track
(Labeled with curtain number and location)
 - Side Weather Flap Track
(Labeled with curtain number and location)
 - Pole Hook
 - Bottom Bar

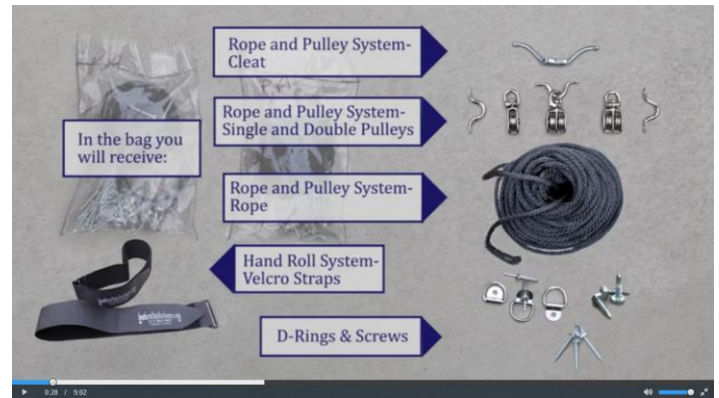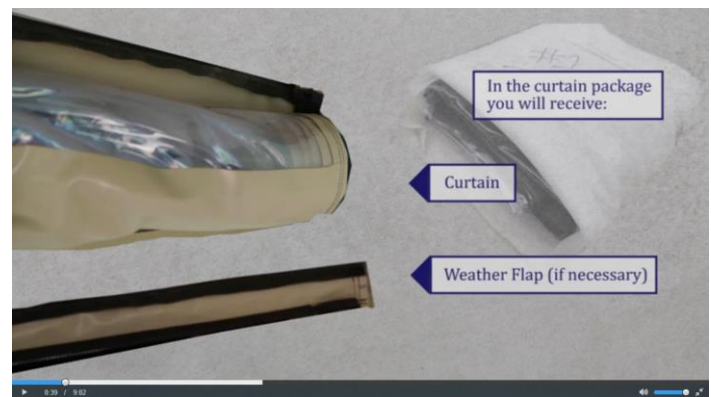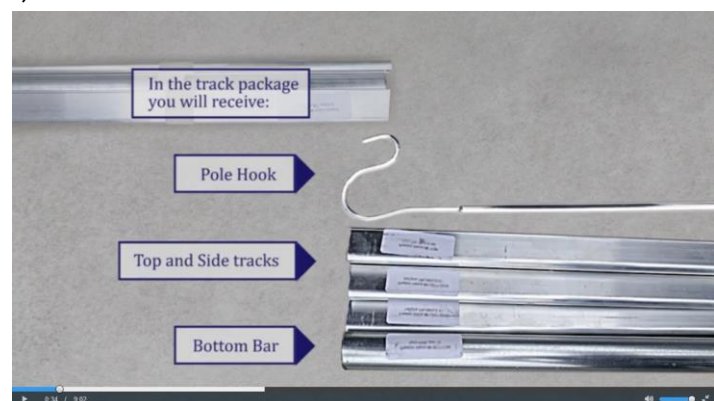


TOOLS YOU WILL NEED

(SEE VIDEO 0:44)

- Hammer Drill
- Cordless Drill
- 3/16" Metal Drill Bit
- 5/16" Nut-Driver
- 3/16" Hammer Drill Bit
- Hammer
- Saw
- Tape Measure
- Lighter
- Scissors
- Duct Tape
- Silicone Spray

HOW TO ORIENT YOUR JOB

(SEE VIDEO 0:47)

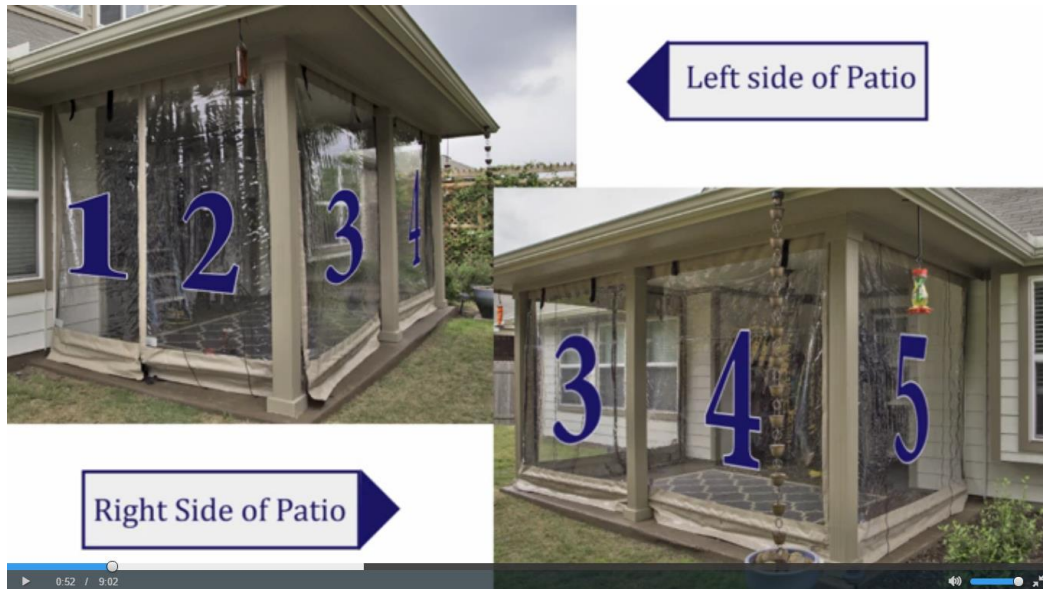


- Your curtains are identified, from the outside of your patio, looking in, starting from the left side and moving right. The curtain on the far left side is #1, and will increase in sequence going to the right #2, #3, #4 etc.
- Check the labels on each curtain and track, and compare them to your design consultation prior to installing them on your patio.

STEP 1: INSTALL TOP CURTAIN TRACK

(SEE VIDEO 1:07)

1. Pre-drill the holes in your top and side curtain tracks.
 - a. Mark the location of the 1st two holes, each hole 3" from each end of the track.
 - b. Mark location of additional holes approximately every 15" towards the center of the track, adjusting as necessary for your track length.
 - c. Drill holes using 3/16" metal drill bit at the pre-marked spots.**ALWAYS WEAR SAFETY GOGGLES WHEN DRILLING THROUGH METAL.**

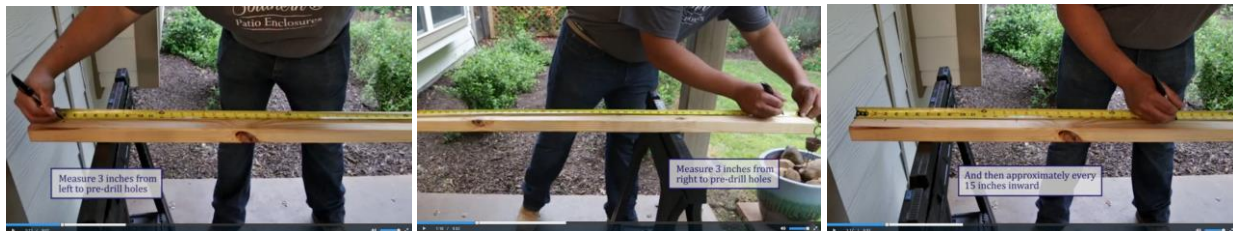

2. Install your top track at respective openings using concrete, wood or metal screws as necessary.
 - a. Install your top track at your max measured height. If you are installing your pulley systems above your track (reference Step 2 and your design consultation), allow 1/2" above the track for the pulley installation.
 - b. You may need to pre-drill holes into your patio structure prior to installing track.
 - c. Use appropriate concrete, wood or metal screws provided.



3. Repeat for each curtain.

STEP 2: INSTALL PULLEYS

Rope and Pulley Systems Only

(SEE VIDEO 1:54)

- 1) Decide if your pulleys will be mounted above or below your top track.
 - a) If your pulleys are mounted above your track, the curtain will roll towards you.
 - b) If your pulleys are mounted below your track, the curtain will roll away from you.




- 2) Decide on which side of the curtain you will mount your rope cleat.
 - a) Your rope cleat will need to be in a location that is easy to access when you want to deploy or roll up your curtains.



- 3) Install 1st Double Pulley 3" from the end of the track on the side of the rope cleat.



- 4) Install 2nd Double Pulley 15" from the end of the track on the side of the rope cleat.

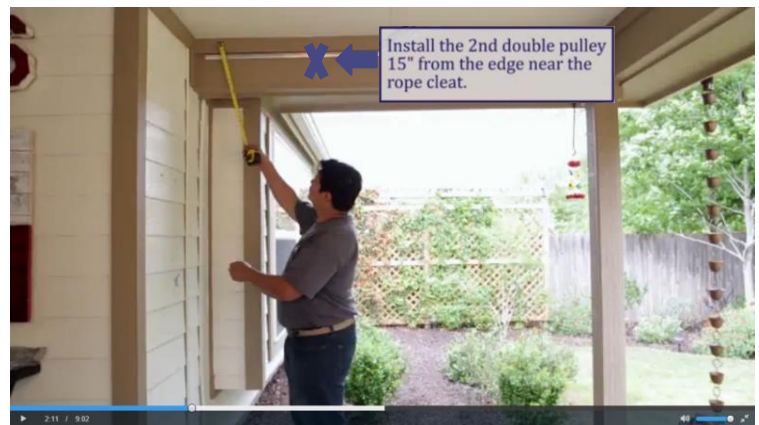

- 5) Install your Single Pulley 15" from the opposite end of the track.



- 6) Repeat for each curtain.

STEP 3: RUN AND ANCHOR THE ROPE


Rope and Pulley Systems Only

(SEE VIDEO 3:20)

- 1) Run 1st end of the rope:
 - a) Start by running it through the inside of the 1st double pulley near the rope cleat.
 - b) Then run it through the 2nd double pulley.
 - c) Run the rope all the way down to the floor, and then back up to the track again
 - d) Tie a knot in the end of the rope and anchor the end of the rope behind the track. You may need to loosen the track slightly to fit the rope behind it. Make sure the rope is NOT directly behind the pre-drilled track holes. Drilling through the rope when securing the track will cause the rope to fray and fail.



- 2) Run 2nd end of the rope:
 - a) Start by running it through the outside of the 1st double pulley near the rope cleat.
 - b) Run it through the outside of the 2nd double pulley.
 - c) Run it through single pulley.
 - d) Run the rope all the way down to the floor, and then back up to the track again.
 - e) Tie a knot in the end of the rope and anchor the end of the rope behind the track as directed above.

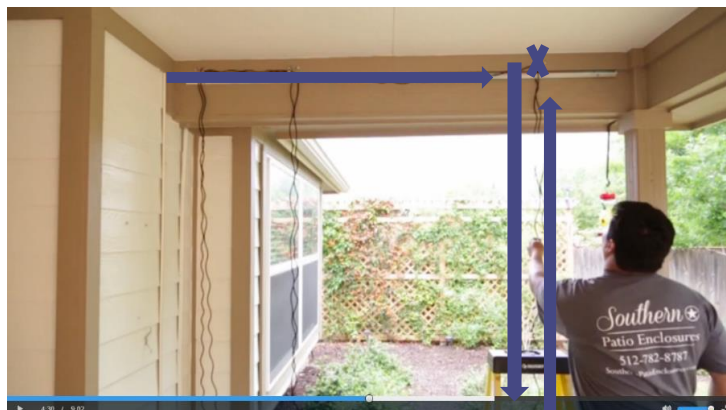

- 3) You will have three loops of rope:
- a) One between the 1st double pulley and where the rope cleat will be installed
 - b) One underneath the 2nd double pulley
 - c) One underneath the single pulley




- 4) Re-secure all screws that were loosened to anchor the rope.
- 5) Repeat for each curtain.

STEP 4: ATTACH THE VELCRO STRAPS

Hand Rolled Systems Only

(SEE VIDEO 4:31)

- 1) Hang two Velcro straps for each curtain, 15" from each edge of the curtain track.
 - a. Loosen the track and at the location of the strap.
 - b. Slide the Velcro strap behind the track, with the hook and loop side facing your structure and the buckle on top
 - c. Leave about 4" of the strap hanging over the top of the track

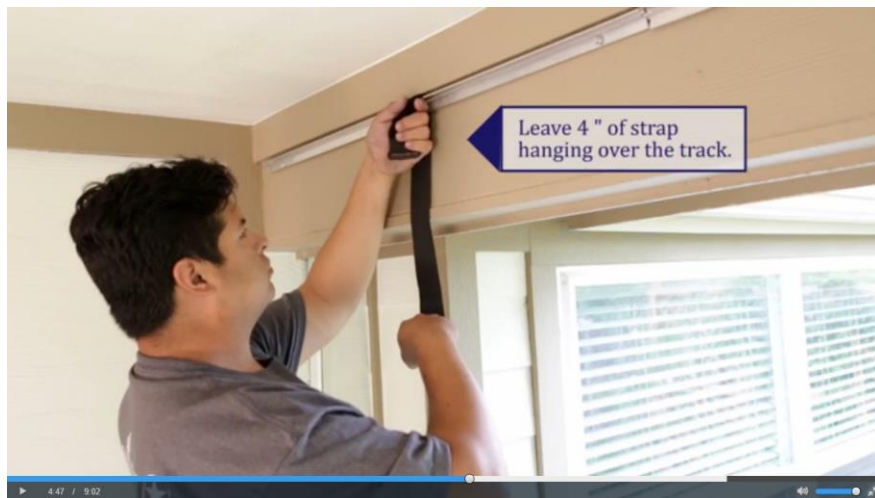

- d. Re-secure the track to the structure through the Velcro strap.




- e. Repeat on opposite end of track.
 - f. Repeat for each curtain.


STEP 5: HANG THE CURTAINS

(SEE VIDEO 5:09)


- 1) If desired, spray the track with silicone spray to allow the curtain to slide easier into the track.
- 2) Slide the top welting of the curtain into the track with the bottom webbed straps on the side of your structure where they can be easily accessed.
 - a. Be sure you have the correct numbered curtain for your opening.
 - b. If there are two curtains in an opening, it is easier to slide the curtain from the middle of the opening to the outer edges.
 - c. You may need to loosen the edge of the track if you need to slide the curtain in through a tight corner. Re-secure the track once the curtain fully centered.

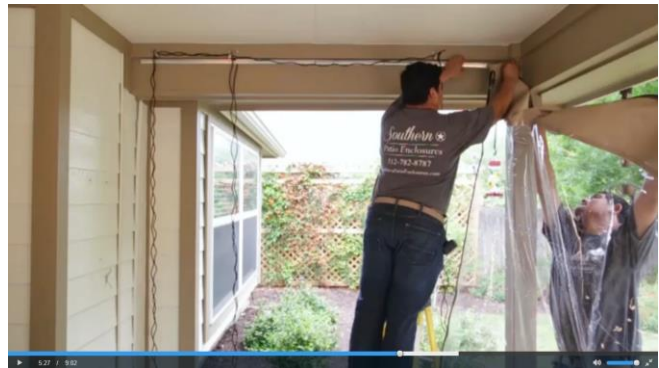

- 3) Use the provided self-tapping screw to secure the curtain into its track.

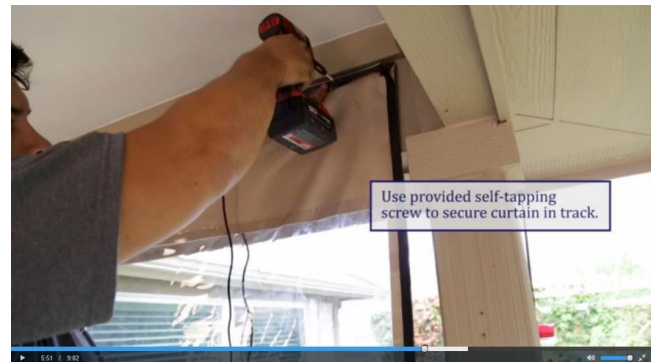

- 4) Insert the bottom bar into the bottom pocket of the curtains
 - a. Use duct-tape to cover the ends of the bottom bar, so they do not tear the curtain.

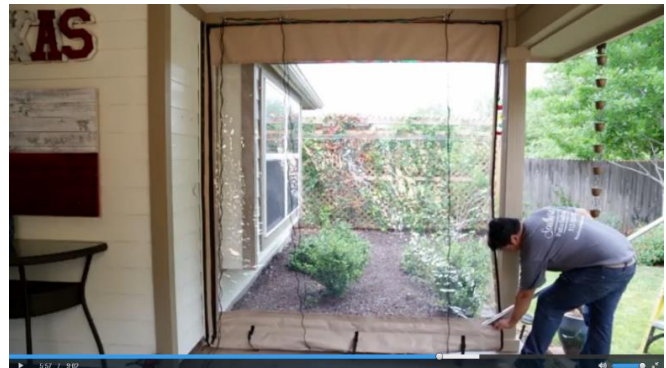

- 5) Continue installing all of the curtains around your structure.


STEP 6: INSTALL WEATHER FLAPS

(SEE VIDEO 7:01)

- 1) Unzip the weather flaps from their adjacent curtains to install them into their tracks.



- 2) Install the weather flap tracks through their pre-drilled holes (from step 1) into their respective locations using the screws provided.

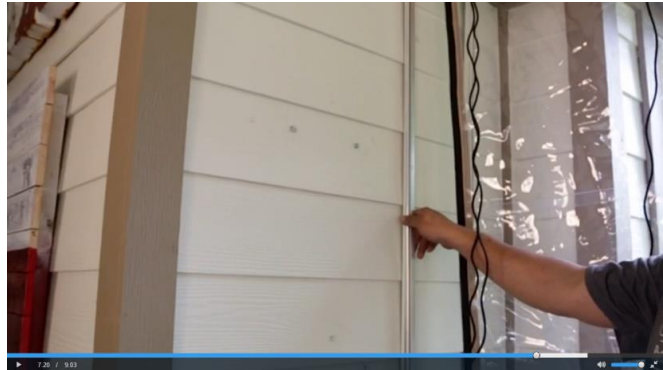

- 3) Slide your weather flap into its track, from the bottom all the way to the top, loosening and re-securing the track as necessary.



- 4) Secure the weather flap in its track with a self-tapping screw.
- 5) Repeat for each weather flap. Reference your design consultation if needed.

STEP 7: INSTALL D-RINGS

(SEE VIDEO 7:37)


- 1) Zip all of the curtains together.
- 2) Mark each spot on the floor where the webbed straps meet the floor.



- 3) Using the appropriate cordless or hammer drill, drill a hole in the floor at each spot.



- 4) Use a hammer to insert the D-Rings into the pre-drilled holes

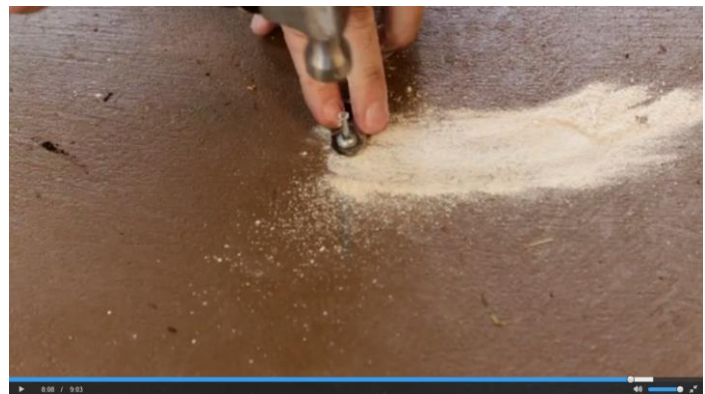

STEP 8: INSTALL THE ROPE CLEAT

(SEE VIDEO 8:20)

- 1) Locate the position chosen for the rope cleat in Step 2.



- 2) Secure the rope cleat here using the appropriate screws provided.
- 3) WHILE THE CURTAIN ARE LOWERED AND SECURED TO THE D-RINGS, wrap the excess rope around the rope cleat 5-6 times.



- 4) Pull out an extra foot of rope, tie the ends together, cut the excess rope and sear with a lighter to prevent fraying.



USING THE CURTAINS

*Congratulations! You've now completed installing your new
Southern Patio Enclosures System.*

Keep in mind the following tips for proper usage and storage:

Always secure your curtains to their D-Rings when deployed. This will strengthen the attachments and reduce the possibility of wind damage.

Practice good rope management. Always keep the excess rope secured tightly when not deploying curtains. This will prevent the ropes from tangling and fraying.

When rolling up your curtains with the Rope and Pulley system, always start by rolling them up by hand to about chest-height, to ensure a tight and even curtain roll. Then while holding the curtains with one hand, tighten up the slack in the rope and finish raising the curtains to the top of your structure.

Use your provided pole-hook to reach the zipper at its highest heights.

If your curtains are wider than 10', you may need a 2nd person to help roll them up.

The cleaner you roll up your curtains the longer they will last, you will reduce rope fray and curtain damage, they will look cleaner in the rolled-up position, and it will help protect your curtains from the elements.

Never attempt to roll up the curtains in strong winds. Roll up your curtains before a storm hits to protect them from wind damage.

CLEANING AND MAINTAINING YOUR CURTAINS

To keep your clear vinyl crystal clear, and your shades and colored-vinyl clean, follow the below tips:

Spray off any debris with a garden hose.

With a MICRO-FIBER CLOTH and clear vinyl polish, polish both the inside and outside of your curtains.

Using bar rags, paper towels and wash cloths will damage the clear vinyl and cause scratches.